

# ACOUSTIC GEOMETRY™

## DIFFUSER VERTICAL INSTALLATION INSTRUCTIONS

### HARDWARE INCLUDED:

- (4) Black wall brackets
- (8) Hollow wall anchors
- (8) Phillips head screws



### TOOLS NEEDED:

- Pencil
- Tape measure
- Level (2')
- Cordless drill
- Phillips driver




Continued on next page...


# ACOUSTIC GEOMETRY™

## DIFFUSER VERTICAL INSTALLATION INSTRUCTIONS Cont.

1. Determine top and center of diffuser.

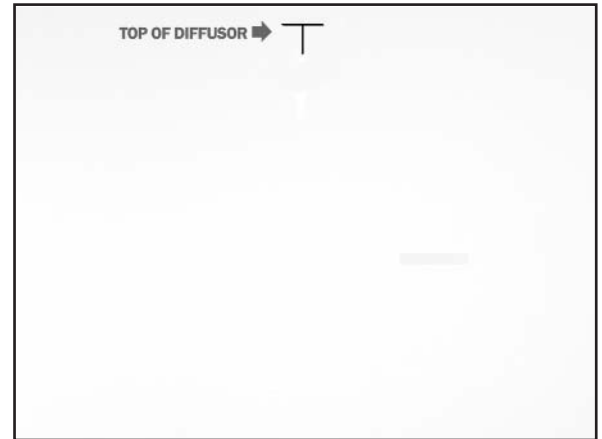


2. Measure down  $3\frac{13}{16}$ " from the top of the diffuser mark. Draw a 17" level line centered on the center of the diffuser. Place a mark at each end of the 17" level line and a mark 3" in from each end of the line.

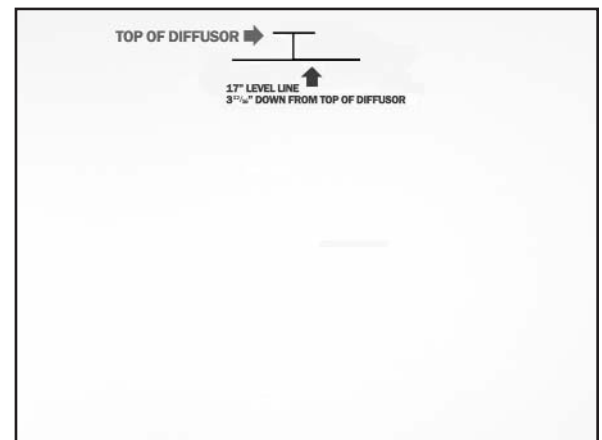


# ACOUSTIC GEOMETRY™

## DIFFUSER VERTICAL INSTALLATION INSTRUCTIONS Cont.

3. Measure down  $37\frac{3}{4}$ " from the top of the diffuser mark. Draw a 17" level line centered on the center of the diffuser. Place a mark at each end of the 17" level line and a mark 3" in from each end of the line.

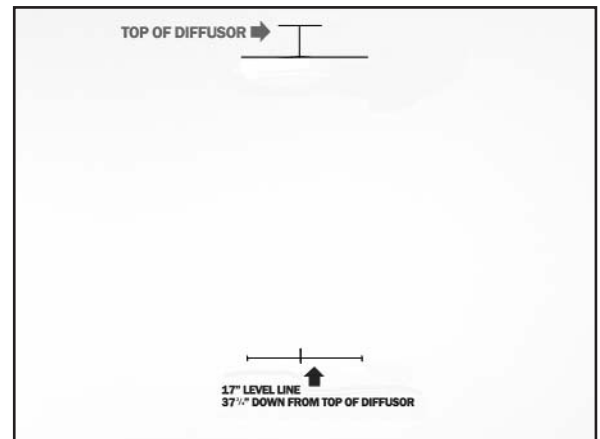


4. Install hollow wall anchors at each mark.

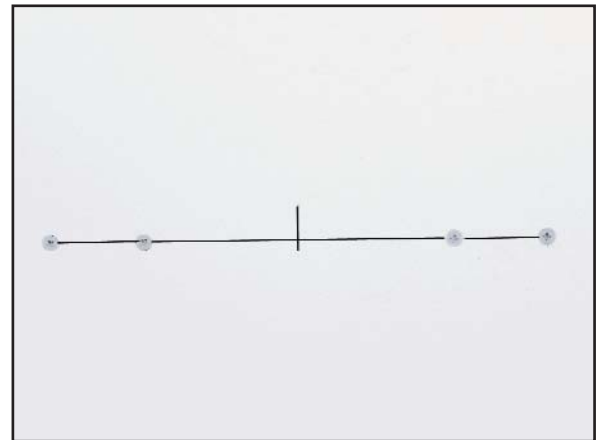

# ACOUSTIC GEOMETRY™

## DIFFUSER VERTICAL INSTALLATION INSTRUCTIONS Cont.

5. Install the black wall brackets with phillips head screws. Bracket should have the long point facing up and out.

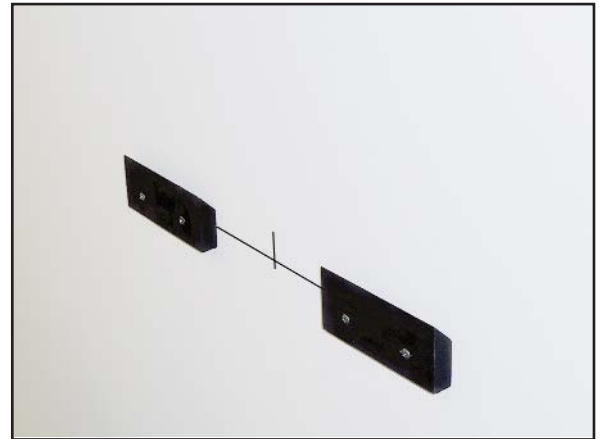

6. Hang diffuser on wall brackets.

